

Wrap-Around Noise-Canceling Computer Microphone

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Wrap-Around Noise-Canceling Computer Microphone is a highly sensitive condenser microphone with wide frequency response for crisp sound. Its noise-canceling technology filters out background noise so your voice is transmitted clearly. Its sleek, hands-free design is ideal for anyone using a microphone while speaking or performing, such as a vocalist, coach, or teacher. The microphone is also a great companion to a wireless transmitter. You can also use the microphone with most PC sound cards (powered or unpowered) that have a $\frac{1}{8}$ - or $\frac{1}{4}$ -inch microphone input jack.

Your microphone's features include:

Gooseneck Microphone Stem — lets you easily adjust the microphone's position.

Lightweight Headband — lets you wear the headset comfortably.

On/Off Control with Belt Clip — lets you conveniently turn the microphone on and off at any time.


Gold-Plated Stereo Plug — ensures the best possible connection.

INSTALLING THE BATTERY

Your microphone comes with a 357A silver-oxide button-cell battery for power.

Follow these steps to install the battery.

1. Press in the tab on the battery compartment cover, then pull the cover off.

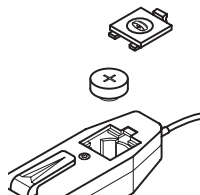

2. Place the battery in the compartment with the positive (+) side facing up.
3. Snap the cover back into place.

When the microphone's sound weakens or if it stops working properly, replace the battery.

Warnings:

- Keep batteries out of reach of children. Swallowing a button-cell battery can be fatal.
- Always dispose of an old battery promptly and properly. Do not burn or bury it.

Caution: Always use a fresh battery of the required size and type.

Note: If you will not be using the microphone for several months, remove the battery. Batteries can leak chemicals that can destroy electronic parts.


CONNECTIONS

1. Connect the headset's $\frac{1}{8}$ -inch (3.5-mm) plug to the control's jack.
2. If the desired receiver's microphone jack is not $\frac{1}{4}$ -inch (6.35 mm), pull off the $\frac{1}{4}$ -inch adapter plug from the end of the control's cord.
3. Connect the control's plug to the desired receiver's jack.

USING THE MICROPHONE

1. With the headband in back, slide the headset onto your head.
2. For the best sound, bend the microphone's gooseneck stem so the microphone is about 1 inch away from your mouth.
3. To hold the control in place, slide the control's belt clip onto your belt or over a fold of fabric.
4. To turn on the microphone, slide **ON/OFF** to **ON**. Speak into the microphone and adjust the receiver's volume control to the desired listening level.
5. When you finish, slide **ON/OFF** to **OFF** to turn off the microphone.

FREQUENCY RESPONSE CURVE

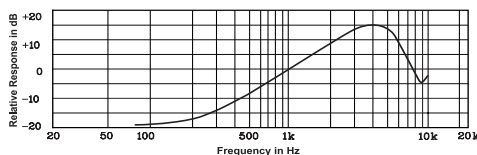

SPECIFICATIONS

Microphone Type	Electret Condenser
Polar Pattern	Noise Canceling
Impedance	1.5 Kohms \pm 30%
Sensitivity (at 1 kHz)	-58 dB \pm 4dB
Test Condition	1.5V DC RL = 2.2 kOhms, L = 50 cm
Frequency Response	100 Hz–10,000 Hz
Operating Voltage	1V–10V DC
Cable (Diameter \times Length)	
Headset	2.5 mm \times 1.3 M, 3.5 mm Gold-Plated Pin Stereo Plug
Control Box	2.0 mm \times 5.0 M, 3.5 mm Gold-Plated Pin Mono Plug Angle Type

Weight

Headset Microphone	1.4 oz (40 g)
Control	1.6 oz (45 g)

Included Accessories

Adapter Plug	$\frac{1}{8}$ -in to $\frac{1}{4}$ -in (3.5 mm) to (6.35 mm)
Battery	One 357A Silver-Oxide Button-cell

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99